

Warning

1. Check the voltage indicated on the rating label is suitable before connecting to the mains.
2. If the power cord is damaged it must be replaced immediately by a qualified electrician or returned to the store where you purchased the product to avoid a hazard.
3. Do not operate the fan if it malfunctions, has been dropped or damaged in any way.
4. Do not operate if the fan grille has been removed or damaged.
5. Close supervision is necessary when this fan is used near children, the elderly & pets.
6. This appliance can be used by children aged from 8 yrs and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
7. Always turn off the fan after use, before cleaning, or moving location.
8. Do not insert fingers or other objects into the fan grille.
9. Never place the power cord under a carpet or rug.
10. Never operate the fan where it may fall into a bath or other water container.
11. Do not use outdoors. This product is designed for domestic household use only.
12. Disconnect from the mains by gripping the plug. Do not pull by the power cord

Disposal

The packaging of your new fan has a recycle mark on it. Please dispose of it as recycled paper or by using the "Dual System".



The symbol  on the product or on its packaging indicates that this product may not be treated as general household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office, your household waste disposal service, the store where you purchased the product or visit www.recycle-more.co.uk.



Please Recycle

Technical Data

Ref: IM/SFC8/1601/GU86AA
Model No: SFC-200B (8" / 20cm)
Power: 36W
Voltage: 220-240V ~ 50Hz
Product Dims (L*D*H): 280 x 140 x 260 mm
NW: 1.75 kg
GW: 2.10 kg

UK guarantee

For 12 months warranty in respect of defects found to be due to faulty workmanship or material. Proof of purchase is required for validity of the guarantee. This guarantee is no longer valid if the damage has been caused by fall, alteration or repair by any unauthorised persons. This guarantee in no way affects your statutory rights.



© 2016 Newton Stovold Associates Ltd
GU8 6AA / www.nsauk.com

NSAUK
newton stovold associates

Air Circulator

8 inch / 20 cm

Model: SFC-200B



Instruction manual


- ❖ 3 fan blades
- ❖ 3 speeds
- ❖ Rotary controls
- ❖ Tilt
- ❖ Carry Handle
- ❖ Rubber Feet

Please keep safe for future reference

Air Circulator

Thank you for purchasing this air circulator. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product. Please retain this information for future reference.

Appliance components

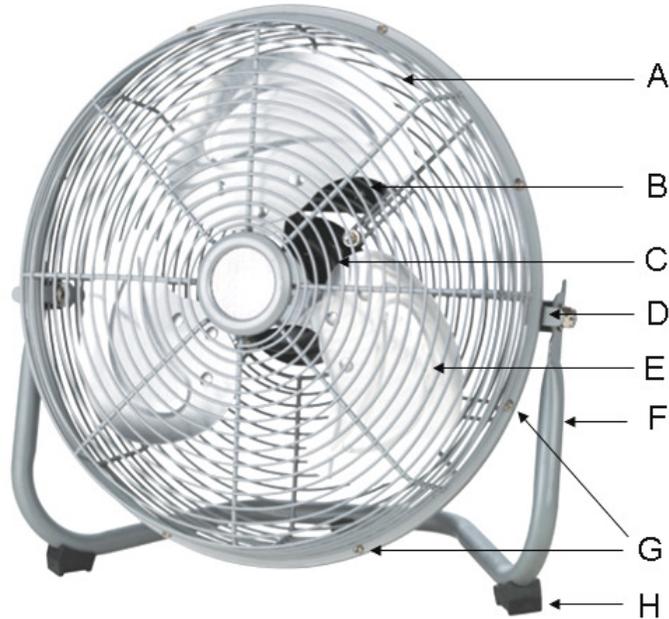

- A. Fan grille
- B. Rotary controls (not visible)
- C. Motor
- D. Tilt pivot (120° rotation)
- E. Fan blade
- F. Stand
- G. Fan grille securing screws (8pc)
- H. Non-slip feet

Operation

1. Position your fan on a dry, level surface & plug into an electrical socket.
2. Select 1=Low; 2=Med or 3=Hi on the rotary speed control switch ("B" above not visible – located on the back of the fan). Select 0 to turn OFF the fan.
3. Airflow direction can be adjusted upwards or downwards by simply tilting the fan head to the desired angle. Up to 120° rotation.

Cleaning & Care

- ◆ Unplug the appliance before cleaning.
- ◆ Do not use any chemical-based solutions for cleaning metal surfaces.
- ◆ Slightly moisten a cloth and then wipe the surfaces of the fan.
- ◆ In order to remove the dust from the protective fan grille use a vacuum cleaner or undo the securing 8pc screws on grille edge and wipe fan blades with a damp cloth.
- ◆ Ensure fan is completely dry and the fan grille securely refitted before storage or reconnecting to electrical supply.
- ◆ Never immerse the fan or fan motor in water or other liquid.
- ◆ If the fan is not used for long periods, protect with a suitable cover after cleaning, then store in a dry place.
- ◆ The motor bearings are permanently sealed and do not require additional lubrication.


This appliance complies with both the low voltage and electromagnetic compatibility directives. Its construction complies with current safety standards. We reserve the right to make technical changes without prior notice.

BS plug wiring

1. Wiring instructions: Should it be necessary to change the plug please note the wires in the mains lead are coloured in accordance with the following code:

BLUE – NEUTRAL * BROWN – LIVE * GREEN AND YELLOW - EARTH

2. As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
3. The BLUE wire is the NEUTRAL and must be connected to the terminal that is marked with the letter N or coloured BLACK.
4. The BROWN wire is the LIVE and must be connected to the terminal that is marked with the letter L or coloured RED.
5. The GREEN/YELLOW is the EARTH and must be connected to the terminal which is marked with \oplus or the letter E or coloured GREEN OR GREEN/YELLOW.
6. Always ensure that the cord grip is positioned and fastened correctly.

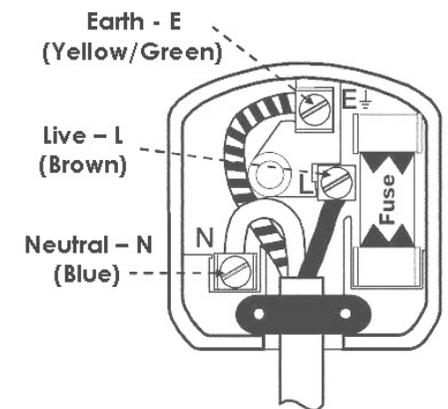

If a 13A (BS 1363 fused plug is used it must be fitted with a 5A fuse. If in doubt consult a qualified electrician.