

Cleaning and care

- Unplug the appliance before cleaning. Don't use any water for cleaning metal surfaces.
- Slightly moisten a cloth and then wipe off the surfaces of the fan.
- In order to remove the dust from the protective grille use a vacuum cleaner or reverse assembly instructions (refer to Figs 4 – 6 on Page 3).
- Never immerse the fan or fan motor in water or other liquid.

Compliance

This appliance conforms with both the low voltage and electromagnetic compatibility directives. Its construction complies with current safety standards. We reserve the right to make technical changes without prior notice.

Disposal

The packaging of your new fan has a recycle mark on it. Please dispose of it as recycled paper or by using the "Dual System". This product should not be treated as normal household waste. It should be recycled, so please take it to an approved collection facility.



The symbol on  the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office, your household waste disposal service or the store where you purchased the product.



Please recycle

Warning

1. Do not operate the fan with a damaged power cord or plug after it malfunctions, has been dropped or damaged. If the power cord is damaged it must be returned to your nearest store to avoid a hazard.
2. Close supervision is necessary when this fan is used near children, the elderly and pets.
3. This appliance can be used by children aged from 8 yrs and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
4. Always turn the fan off after use, before cleaning, or moving location.
5. Do not touch the fan with hand or hard object before the fan stops moving.
6. Always use two hands to carry this product – support the fan head and the base.
7. Do not use outdoors.

UK guarantee

24 months warranty valid only in respect of defects found to be due to faulty workmanship or material. Proof of purchase is required to validate the guarantee. This guarantee is invalidated if the damage has been caused by fall, alteration or repair by any unauthorised persons or if the product has been resold. This guarantee in no way affects your statutory rights

NSAUK
Godalming
GU8 6AA

www.nsauk.com



Technical data

Model No: SF-4072
Ref: IM/SF4072/1702/GU86AA
Power: 60 W
Voltage: 220-240V ~ 50Hz
Prod Dims: 129-135 x 45 x 45 cm (HxWxD)
N.W: 5.68 kgs G.W: 6.95 kgs

© 2017 Newton Stovold Associates Ltd
www.nsauk.com

NSA^{UK}
newton stovold associates

**16in / 40 cm
Pedestal Fan
Model SF-4072**



Instruction manual

(Rev Feb 2017)


- ❖ 3 speeds
- ❖ Dial controls
- ❖ Oscillation
- ❖ Tilt
- ❖ Height adjustable to 1.35m
- ❖ Round base

Please keep safe for future reference


16"/40cm Pedestal fan

Thank you for purchasing this pedestal fan. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product. Please retain for future reference.

Appliance components

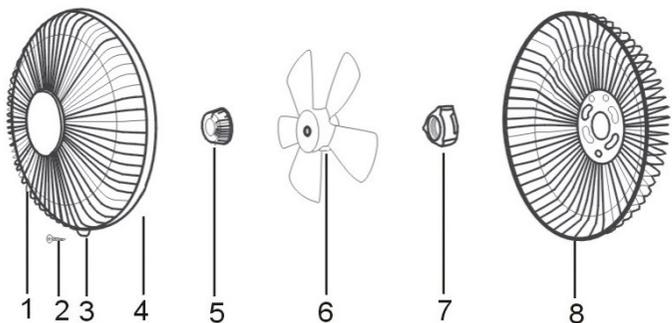

- | | |
|---------------------------|----------------------------|
| 1. Front Grille | 11. Carry Handle |
| 2. Safety Screw | 12. Oscillation Knob |
| 3. Locking Clip | 13. Angle of Tilt |
| 4. Guard Ring | 14. Speed Control Switch |
| 5. Blade Cap | 15. Controls Housing Bolt |
| 6. Fan Blade | 16. Inner Pole |
| 7. Clamping Nut | 17. Height Adjustment Bolt |
| 8. Rear Grille | 18. Pedestal |
| 9. Motor Shaft & Pin | 19. Base Plate |
| 10. Motor Housing (Front) | 20. Base Nut |

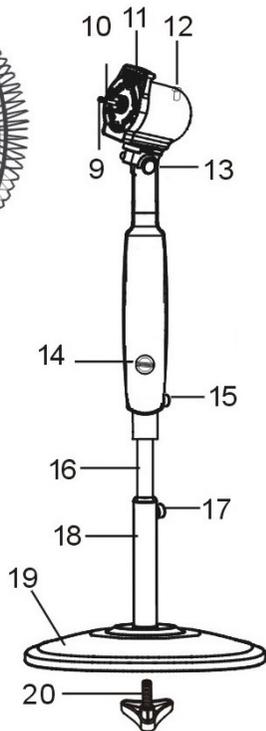

Assembly

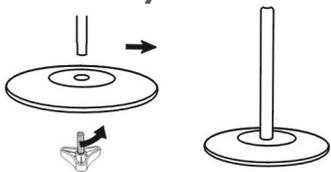


FIG 1

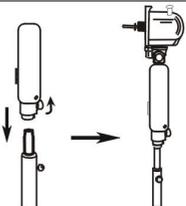


FIG 2

1. Assemble Base Plate

- Loosen and remove base nut (20) from pedestal (18).
- Insert the pedestal into the base plate (19).
- Secure the pedestal onto the base plate with the base nut.

2. Assemble Pedestal

- Release inner pole (16) from pedestal (18) by loosening height adjustment bolt (17) & retightening.
- Insert the main fan body onto pedestal and secure in place with controls housing bolt (15).

Assembly (Cont'd)

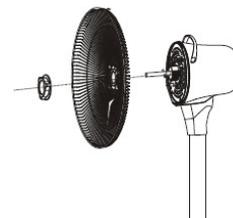


FIG 3

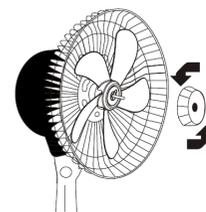


FIG 4

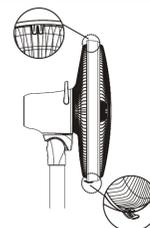


FIG 5

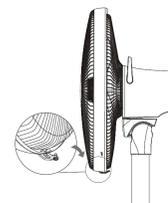


FIG 6

3. Assemble rear grille

- Remove and discard the plastic tube from the motor shaft.
- Remove the blade cap (5) by turning clockwise and the clamping nut (7) by turning anticlockwise.
- Install the rear grille (8) by positioning onto the three pins on the front motor cover (10).
- Lock and secure the rear grille with the clamping nut (7) by turning clockwise.

4. Assemble fan blade

- Insert the fan blade (6) onto the motor shaft (9) and adjust, as necessary, onto the pin.
- Fit the blade cap (5) onto the motor shaft and fix it lightly by turning anticlockwise, as illustrated.
- Make sure the fan blade moves freely and does not catch on the rear grille or clamping nut.
- If the blade does not rotate freely, repeat steps 3 & 4 above.

5. Assemble front grille


- Align the front and rear grilles correctly (1 & 8).
- Position the top clip on the front grille with the top part of the rear grille (see top inset image).
- Loosen the safety screw (2) and open the locking clip (3) at the bottom of the guard ring (4).
- Press the guard ring firmly over the back grille, close the locking clip and tighten the safety screw.

6. How to remove the front grille (for cleaning)

- Reverse instructions on #5 & #4 above:
- First loosen the safety screw & open locking clip.
 - Twist & separate the back grille from the guard ring, then pull downwards to remove it.
 - Lift away the front grille from top clip mentioned in 5b above.

Operation

- Once the fan is assembled, plug into an electrical socket and switch on power.
- Choose the desired speed by twisting the speed control switch (14) to 1 = LOW, 2 = MED or 3 = HIGH and 0 = OFF.
- To make the fan oscillate, push down on the oscillation knob (12) located on the top of the motor housing. To stop the fan from oscillating, pull up the oscillation knob.

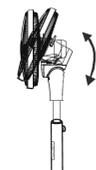

Tilt adjustment:

Gently tilt the fan head up or down to the desired angle. NB Only adjust tilt when the fan is turned off



Height adjustment:

Loosen the height adjustment bolt (17), adjust the inner pole to the desired height and re-tighten bolt