

Safety Instructions

WARNING - This appliance is intended for use in a domestic environment.

When using electrical appliances, basic safety precautions should always be followed:

1. Check the household voltage to ensure it matches the appliance's rated specification.
2. Extreme care should be taken when any product is used by, or near children or individuals with certain disabilities. Keep out of reach of children when not in use.
3. Before operating your Corkscrew remove the unit from its packaging and charge your Corkscrew for at least 2 hours.
4. Never force the corkscrew onto a bottle or attempt to speed up the mechanism. The Corkscrew will work best at its intended speed.
5. Do not let children play with the packaging, for example the plastic bags.
6. Do not operate any product with a damaged cord or plug.
7. Do not attempt to open bottles if the switch is not working correctly.
8. If your Corkscrew malfunctions or is damaged in any manner return the Corkscrew to an authorised service facility for examination and repair to avoid a hazard.
9. Do not attempt to repair or adjust any electrical or mechanical functions on this unit as this may void warranty.
10. Always unplug the charger if you do not intend to use your Corkscrew for a long period. To disconnect from the power supply, grip the adaptor and pull from the power socket. Never pull by the cord.
11. This product is not intended for use in wet or damp locations.
12. Do not let the power cord hang over the edge of a table or counter. Arrange the power cord away from any area where it may be tripped over.
13. Never place the Corkscrew or charger where it may fall into a sink or other water container.
14. When not in use always store in a dry area.
15. Do not place the unit in a dish washer.
16. Do not place the corkscrew on or near an open flame, cooking or heating appliance or a hot surface.
17. Use only with the adaptor supplied.
18. This product contains no serviceable parts.

Service & Warranty

This product is guaranteed free from defects in materials and workmanship for a period of one (1) year. Proof of purchase is required to validate the guarantee.

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, this will render this WARRANTY VOID.

This guarantee is no longer valid if the damage has been caused by fall, alteration or repair by any unauthorised persons or if the product has been resold.

The product you buy may sometimes differ slightly from illustration.

This warranty is in addition to, and does not affect, your statutory rights.

Should you have a problem with this product, please contact our help desk on tel: 01483 527799.

This product has been manufactured to comply with EMC Directive 2004/108/EC.

Technical Information

Model No:	W-QCRC-3
Manual Ref:	IM/W-QCRC-3/1734
Battery Type:	Li-ion, rechargeable
Voltage:	3.7V
Adaptor Input:	100-240V; AC 50/60Hz 0.5A Max
Adapter Output:	5.0V DC, 1A
Adaptor Ref:	YLS0121B-U050100
1st Charging Time:	2 hours
Product Dims:	21.5 (H) x 4.5 (W) x 4.7 (D) cm
Product Weight:	NW: 0.36kg GW: 0.52kg



**Quick Charge
Corkscrew
(Rechargeable)**
Model No: W-QCRC-3



- ❖ Rechargeable bottle opener w. Lithium-ion battery
- ❖ Longer battery life & slower self-discharge compared with traditional batteries
- ❖ 2hrs to charge battery full (1st charge)
- ❖ Opens 60 bottles with real corks when fully charged
- ❖ 90 secs quick charge – opens 2 bottles
- ❖ Micro-USB cord allows charging from a computer
- ❖ Compact & portable
- ❖ Rubberised, non-slip finish

**Please read this instruction manual
before using your Corkscrew for the first
time and keep safe for future reference.**



© 2017 Newton Stovold Assocs Ltd
sales@NSAuk.com * GU8 6AA

www.nsauk.com/electrical

Operating Instructions

We recommend charging the Corkscrew for at least two hours before first use. Please follow the instructions below:


Recharging

Notes:

1. Use only the charger supplied with this product as using another charger may damage the rechargeable battery installed in this unit or cause the battery to explode.
2. The actual product differs from graphics shown in Figs 3, 5 & 6 – ie: the transparent lower section in these diagrams are to show the internal workings more easily.


Step 1: (Choose charging method below)

USB Port Charging Method (Fig. 1): Plug the larger end of the USB cable into any available USB port.

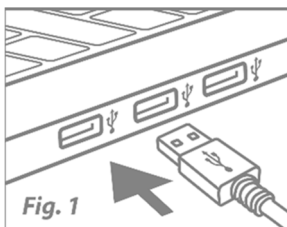


A/C Adapter Charging Method (Fig. 2):

1. Plug the larger end of the USB cable into the included A/C adapter USB port.
2. Then, plug the A/C adapter into an electrical socket.

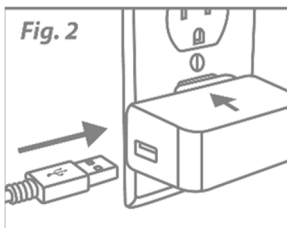


Step 2: Plug the smaller end of the USB cable into the back of the corkscrew. (Fig. 3)

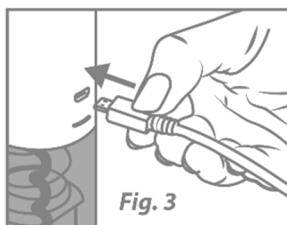

Step 3: Leave on charge for approx. 2hrs. The LED light indicates the corkscrew is being charged and will turn off when charging is complete. Recharge the battery at any time. No need to completely drain the battery before charging.


Operating Process

Step 1: Remove the foil cap from the wine bottle with the included foil cutter before using the corkscrew. (Fig. 4)

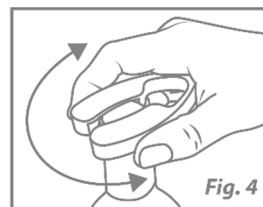

Step 2:

1. Hold the wine bottle with one hand and place the electric corkscrew onto the wine bottle.
2. Press the "DOWN" button to remove cork from the bottle. (Fig. 5)
3. The unit will stop once the cork is removed.
4. Hold the bottle steady with your other hand so it doesn't spin round.

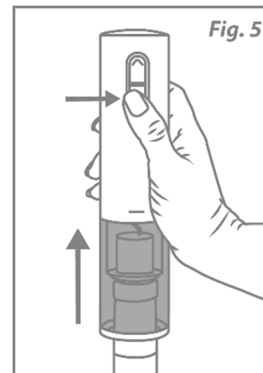

Step 3:

1. Move the corkscrew away from the bottle.
2. Press the "UP" button to eject the cork from the corkscrew. (Fig. 6)



CAUTION: For your own safety and the functioning of the corkscrew - **DO NOT** put fingers or objects near the spiral, especially when in use.

Cleaning

1. Never immerse the appliance in water.
2. To clean the outer surface, simply wipe with a damp cloth.
3. Do not use any scouring pads or abrasive cleaners as these will result in scratches to the unit.
4. Do not use any chemical-based solutions on this product.
5. Ensure the unit is completely dry before storage or reconnecting to electrical supply.

Recycling & Disposal


The packaging of your new wine opener has a recycle mark on it. Please dispose of it as recycled paper or by using the "Dual System".



Please Recycle

Battery & Disposal Information

- ◆ This Corkscrew contains rechargeable batteries. Before you dispose of your Corkscrew the batteries should be removed and disposed of responsibly.
- ◆ This should be done by a qualified technician.
- ◆ Carefully ease the two covers apart, please note, there are springs inside your Corkscrew that will move once the covers are parted but normally stay inside the product.
- ◆ Unplug the leads from the battery pack (Fig. 7) and remove it from your Corkscrew.
- ◆ Dispose of the rechargeable battery pack and product responsibly.
- ◆ Do not mix products bearing the crossed out bin symbol with your general household waste.
- ◆ For the correct collection and treatment of these products take them to collection points designated by your local authority. Alternatively, contact the store which sold you the product.

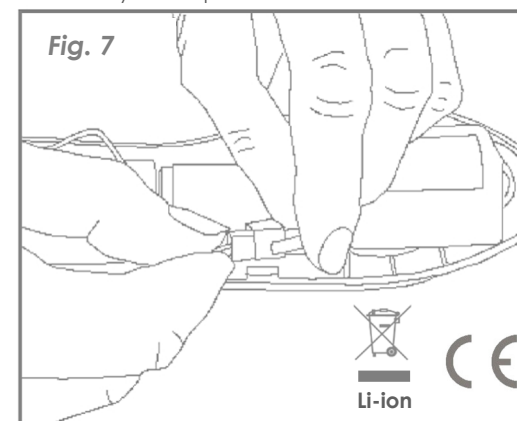

Rechargeable Lithium-ion Battery Warnings

- ◆ The rechargeable Lithium-ion battery contained in this product may explode if disposed of in a fire.
- ◆ Do not charge the battery used in this equipment with any other charger than the one provided with the product. Using another charger may damage the battery or cause the battery to explode.
- ◆ This product is not waterproof. To reduce the risk of fire, electrical shock or damage, DO NOT expose the unit to rain or moisture or other liquid.