

## Safety Instructions

**WARNING - This appliance is intended for use in a domestic environment.**

**When using electrical appliances, basic safety precautions should always be followed:**


1. Check the household voltage to ensure it matches the appliance's rated specification.
2. Extreme care should be taken when any product is used by, or near children or individuals with certain disabilities. Keep out of reach of children when not in use.
3. Before operating your Corkscrew/Preserver remove the unit from its packaging and charge the unit for at least 16 hours.
4. Never force the corkscrew onto a bottle or attempt to speed up the mechanism. The Corkscrew will work best at its intended speed.
5. Do not let children play with the packaging, for example the plastic bags.
6. Do not operate any product with a damaged cord or plug.
7. Do not attempt to open bottles if the switch is not working correctly.
8. If your Corkscrew/Preserver malfunctions or is damaged in any manner return the Corkscrew to an authorised service facility for examination and repair to avoid a hazard.
9. Do not attempt to repair or adjust any electrical or mechanical functions on this unit as this may void warranty.
10. Always unplug the charger if you do not intend to use your Corkscrew/Preserver for a long period. To disconnect from the power supply, grip the adaptor and pull from the power socket. Never pull by the cord.
11. This product is not intended for use in wet or damp locations.
12. Do not let the power cord hang over the edge of a table or counter. Arrange the power cord away from any area where it may be tripped over.
13. Never place the Corkscrew/Preserver or charger where it may fall into a sink or other water container.
14. When not in use always store in a dry area.
15. Do not place the unit in a dish washer.
16. Do not place the corkscrew on or near an open flame, cooking or heating appliance or a hot surface.
17. Use only with the adaptor supplied.
18. This product contains no serviceable parts.

## Technical Information

Model No:	W-RCWS1-SS
Manual Ref:	IM/W-RCWS1-SS/1734
Battery Type:	Ni-MH, rechargeable, AAA size
Voltage:	3.6V (3 batteries of 1.2V each appliance)
Adaptor Input:	100-240V; AC 50/60Hz 0.5A Max
Adaptor Output:	6V DC, 80mA
Adaptor Ref:	YLJXA-U060008
1 <sup>st</sup> Charging Time:	16 hours (thereafter 10hrs)
Product Dims	29 (H) x 10 (W) x 17 (D) cm (on stand):
Product Weight:	NW: 1.02 kg / GW: 1.35 kg

## Battery & Disposal Information

- ◆ This Corkscrew contains rechargeable batteries. Before you dispose of your Corkscrew you must remove the batteries and dispose of them responsibly.
- ◆ To take out the battery pack, remove the screws from the rear cover.
- ◆ Carefully ease the two covers apart, please note, there are springs inside your Corkscrew that will move once the covers are parted but normally stay inside the product.
- ◆ Unplug the leads from the battery pack (**Fig 6**) and remove it from your Corkscrew.
- ◆ Dispose of the rechargeable battery pack and product responsibly.
- ◆ Do not mix products bearing the crossed out bin symbol with your general household waste.
- ◆ For the correct collection and treatment of these products take them to collection points designated by your local authority. Alternatively, contact the store which sold you the product.

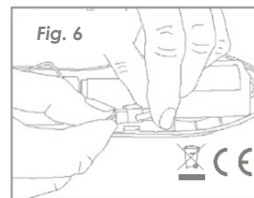

## Rechargeable Lithium-ion Battery Warnings

- ◆ The rechargeable Lithium-ion battery contained in this product may explode if disposed of in a fire.
- ◆ Do not charge the battery used in this equipment with any other charger than the one provided with the product. Using another charger may damage the battery or cause the battery to explode.
- ◆ This product is not waterproof. To reduce the risk of fire, electrical shock or damage, DO NOT expose the unit to rain or moisture.

## Service & Warranty

- ◆ This product is guaranteed free from defects in materials and workmanship for a period of one (1) year. Proof of purchase is required to validate the guarantee.
- ◆ Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, this will render this WARRANTY VOID.
- ◆ This guarantee is no longer valid if the damage has been caused by fall, alteration or repair by any unauthorised persons or if the product has been resold.
- ◆ The product you buy may sometimes differ slightly from illustration.
- ◆ This warranty is in addition to, and does not affect, your statutory rights.
- ◆ Should you have a problem with this product, please contact our help desk on tel: 01483 527799.
- ◆ This product has been manufactured to comply with EMC Directive 2004/108/EC.



© 2017 Newton Stovold Assocs Ltd  
sales@NSAuk.com/electrical \* GU8 6AA



## 2-in-1 Rechargeable Corkscrew & Wine Preserver Gift Set Model No: W-RCWS1-SS



- ❖ Stainless Steel Finish
- ❖ Rechargeable Corkscrew & Wine Preserver in One
- ❖ 16hrs to charge battery full (1st charge, thereafter 10hrs)
- ❖ Opens 30 bottles with real corks or seals 50 bottles – when fully charged
- ❖ Blue LED lights illuminate when charging & in use
- ❖ Wine aerator – to prevent drips when pouring
- ❖ 2 x silicone stoppers w. date indicator
- ❖ Foil cutter
- ❖ Charging adaptor & display/storage stand

**Please read this instruction manual  
before using your Corkscrew/Preserver  
for the first time & keep safe  
for future reference.**

[www.nsauk.com/electrical](http://www.nsauk.com/electrical)

## Operating Instructions

We recommend charging the Corkscrew/Preserver for at least 16 hours before first use. Please follow the instructions below.



**CAUTION:** For your own safety and the functioning of the corkscrew – **DO NOT** put fingers or objects near the spiral, especially when in use.



**CAUTION:** Use only the charger supplied with this product as using another charger may damage the rechargeable battery installed in this unit or cause the battery to explode.

## Charging your corkscrew & preserver


1. Plug one end of the adapter cord into the charging base and the other end into a wall socket.
2. Place the wine opener end into the charging base, making sure that it is firmly in position and is fully engaged with the recharging connectors.

Note: The wine opener will only fit into the charging base one way. The blue light turns on when the unit is seated properly, the charging base is connected in a wall socket, and the unit is charging. The light turns off when the opener is fully charged.

- ◆ It takes about 16 hours to fully charge your wine opener for the first time, thereafter c. 10hrs.
- ◆ When fully charged, it can to open approximately 30 bottles (or seal 50 bottles).
- ◆ You should leave the adapter connected and the appliance on the charging base to maintain a full charge.


## Operating Process - Corkscrew

**Step 1:** Remove the foil cap from the wine bottle with the included foil cutter before using the corkscrew. (Fig. 1)

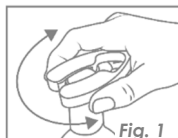

### Step 2:

1. Hold the wine bottle with one hand and place the electric corkscrew onto the wine bottle.
2. Hold bottle firmly with other hand to prevent it spinning round.
3. Press the "DOWN" button to remove cork from the bottle. (Fig. 2)
4. The unit will stop once the cork is removed.

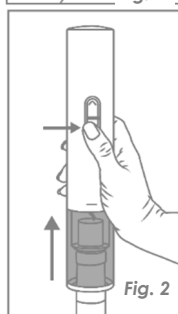


### Step 3:

1. Move the corkscrew away from the bottle.
2. Press the "UP" button to eject the cork from the wine opener. (Fig. 3)

### After Use

- ◆ We recommend that you return your Corkscrew/Wine Preserver to the stand, so that it is fully charged and available to use at any time.

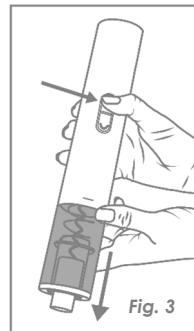


## Understanding the wine preserver

- ◆ By removing the oxygen from the bottle, the wine preserver prevents the early oxidation of the wine, which dulls and damages the taste of the wine (red wines especially).
- ◆ The 2-in-1 wine opener and preserver is provided with two special wine stoppers that will keep the air from re-entering the bottle after using the wine preserver. The stoppers always need to be used in conjunction with the wine preserver.
- ◆ The wine stoppers are equipped with a silver ring that lets you indicate the date the wine preserver was last used, and keep track of the time the bottle has been opened.
- ◆ We recommend drinking the contents of an opened bottle within three to five days to preserve its qualities.

## Using the wine preserver

1. Place the wine bottle on a flat surface. Insert a wine stopper into the wine bottle. Fig. 4
2. Hold the wine stopper & wine bottle neck securely in one hand and place the Wine Preserver on the wine stopper.
3. Keep the Wine Preserver as straight as possible and in line with the wine bottle. Use your thumb and forefinger of the hand holding the bottle to steady the Wine Preserver.
4. Push down on the wine stopper. This activates the pump, which gradually removes the air from the bottle while the stopper prohibits air from re-entering the bottle (Fig. 4).
5. The pumping noise will become slower and stop suddenly after c. 15-20 secs.
6. Do not release the pressure on the wine stopper until the unit stops.
7. Remove the Wine Preserver and replace on its stand until it is needed again.
8. After sealing the wine bottle, store in an upright position as wine may leak if the bottle is laid on its side.

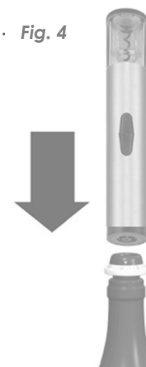

**Note 1:** The Wine Preserver may attach itself to the wine stopper. In this case, hold the wine stopper and the neck of the bottle securely in one hand then tilt the Wine Preserver away from the wine stopper to break the suction. This should prevent air from re-entering the bottle. If in doubt, repeat the above operating process.

**Note 2:** There is no need to use the power button when using the Wine Preserver – firm, downward pressure only. The blue light will glow when the unit is operating.

**Suggestion:** For more than half a bottle of wine remaining – one session should suffice. For less than half a bottle we suggest you repeat the above process a 2nd time.

## Date Indicators

1. Use the "▼" symbol on the stoppers to indicate the date when the bottle was sealed with your Wine Preserver.
2. Gently swivel the silver ring to left or right until the correct date is in line with the "▼" symbol (Fig.5).



## Opening a bottle sealed with a stopper

- ◆ Firmly hold the bottle in one hand and gently ease the wine stopper away from the bottle with your thumb.
- ◆ Store the wine stoppers on the charging stand or in a clean safe place until next required.
- ◆ Rinse the stoppers occasionally in warm soapy water – ensure they are dry before storing or using.
- ◆ Do not place in a dishwasher.

Note: You can remove the vacuum in the bottle also by pressing the pin at the centre of the wine stopper to the side. If the bottle was sealed recently you should hear the air re-entering the bottle.

## Cleaning

1. Never immerse the appliance in water.
2. To clean the outer surface, simply wipe with a damp cloth.
3. Do not use any scouring pads or abrasive cleaners as these will result in scratches to the unit.
4. Do not use any chemical-based solutions on this product.
5. Ensure the unit is completely dry before storage or reconnecting to electrical supply.

## Recycling & Disposal

The packaging of your new wine preserver has a recycle mark on it. Please dispose of it as recycled paper or by using the "Dual System".



Please Recycle