 


# Compact Cool Table Top Air Circulator

---

User manual

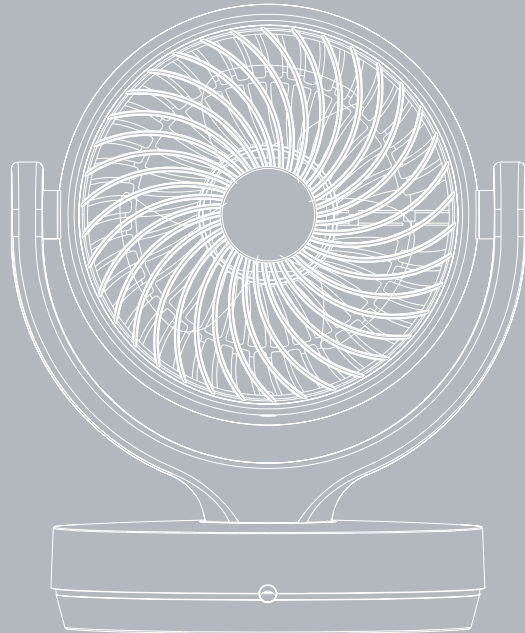

DF15-R31-AC

# Welcome

With a clear focus on new technologies, innovation and design, NSA<sup>UK</sup> has played a leading role in the Air Improvement industry for over 20 years.

NSA<sup>UK</sup> uses the latest technologies to maximise consumer benefits with energy saving DC motors and cordless rechargeability at the forefront.

Boasting 8 Quiet Mark accreditations across the range, NSA<sup>UK</sup> are the leading brand for build quality & exceptionally quiet performance.

# Contents

---

Thank you for purchasing this Table Top / Personal Air Circulator with Remote Control. Please read this instruction manual before using your Table Top Fan for the first time.

Box Contents	4
Parts Description	5
Controls	6
Operation Guide	7
Circulating Air	10
Remote Operation	11
Cleaning & Care	13
Recycling & Disposal	14
Safety	15
Technical Data	16

Keep safe for future reference.

# What's included

---

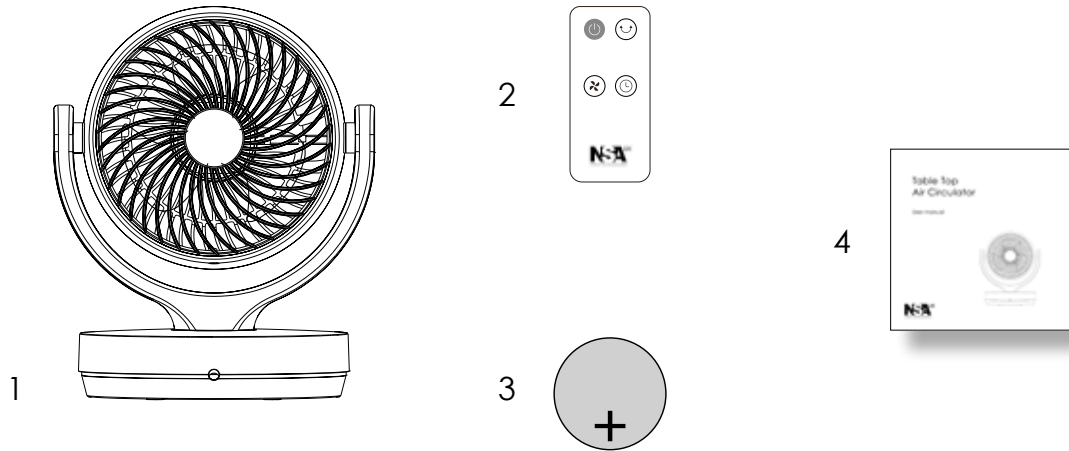 


Fig.1

## Included in the box you will find:

1. Table Top Air Circulator
2. Remote Control
3. CR2032 cell battery (for remote control)
4. User guide

# Parts Description

---

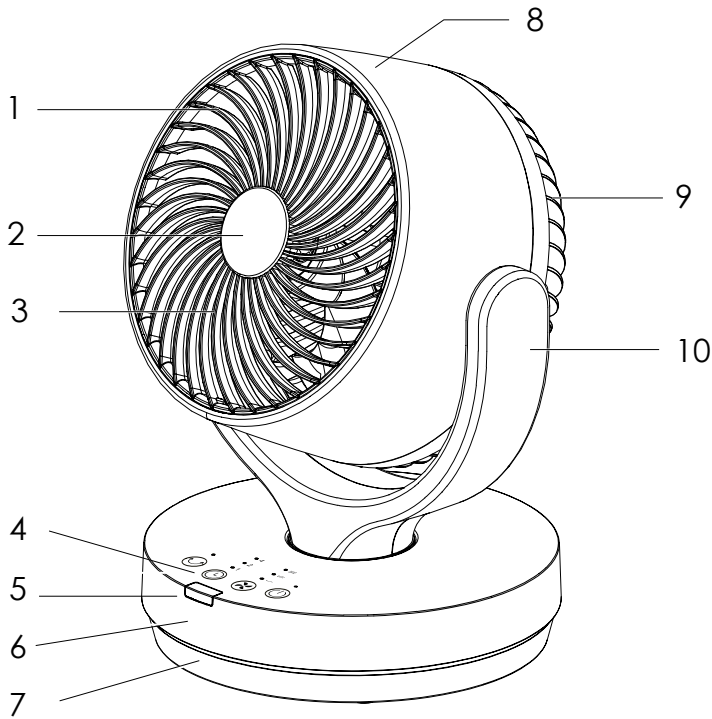 


Fig.2

1. Front Grille (Air Outflow)
2. Centre Disk
3. Fan Blades (Internal)
4. Control Panel w. LED Lights
5. Remote Control Receiver
6. Oscillation Base
7. Base Plate
8. Fan Casing
9. Back Grille (Air Intake)
10. Tilt Point

# Controls

---

## Manual controls

1. Oscillation
2. 1, 2, 4hr timer (Totalling 7hrs)
3. 3 Speeds (Low / Med / High)
4. On / Off

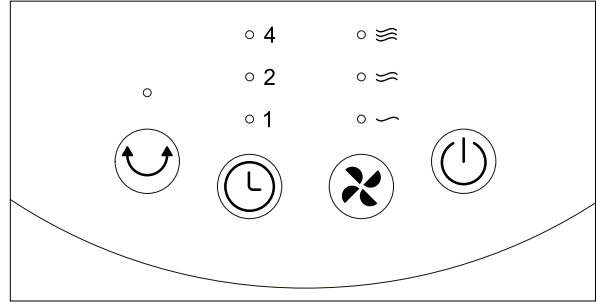 


Fig.3

## Remote control

5. On / Off
6. Oscillation
7. Speed
8. Timer

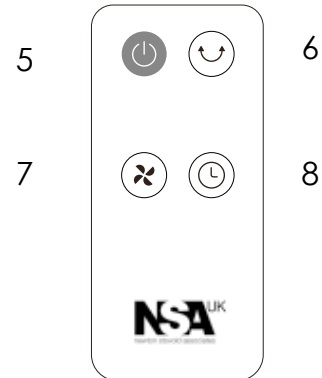 


Fig.4

# Operation guide

---



**On/Off**

Press ON/OFF button on the manual controls or the remote control to turn on the fan. Press again to stop the fan from operating.



**Speed**

 
Press SPEED button on the manual controls or the remote control to select the desired speed level. Each time the SPEED button is pressed the LED light on the control panel indicates the speed selected.





## Timer

You can set the run time for 1 to 7 hours duration. Press the Timer button to move through the timer options. The LED light will indicate the time selected. If there is no LED light showing then the timer is off and operation will be continuous until the fan is manually powered off.



## Oscillation (OSC)

Press OSC once to activate the oscillation feature, for wide distribution of air. Press OSC button again to stop oscillation function.

NOTE: Maximum benefit from oscillation function between 0° to 45°. Little to no benefit when fan head tilted into horizontal position.



## Tilt Adjustment 0-90°

- Gently tilt the fan head up or down to the desired angle.
- NB: Only adjust tilt when the fan is turned off. Adjusting tilt when the fan is operating may damage the tilt mechanism.

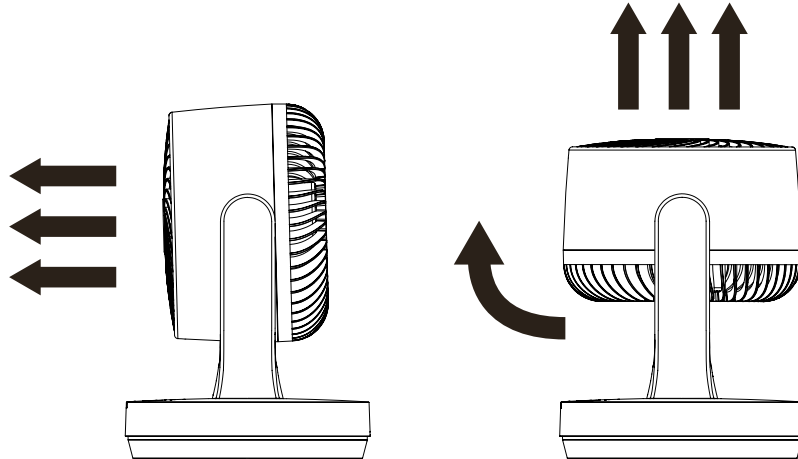 



Fig.5

# Circulating Air

**Suitable uses for circulating air around the home include:**

- Distributing Air Conditioned & cooled air throughout the room
- Distributing Heated air throughout the room
- Circulating air upstairs & around the house
- Evenly distribute Air Conditioned & cooled air between rooms
- Circulate warm air from inside to outside

 Fig.6

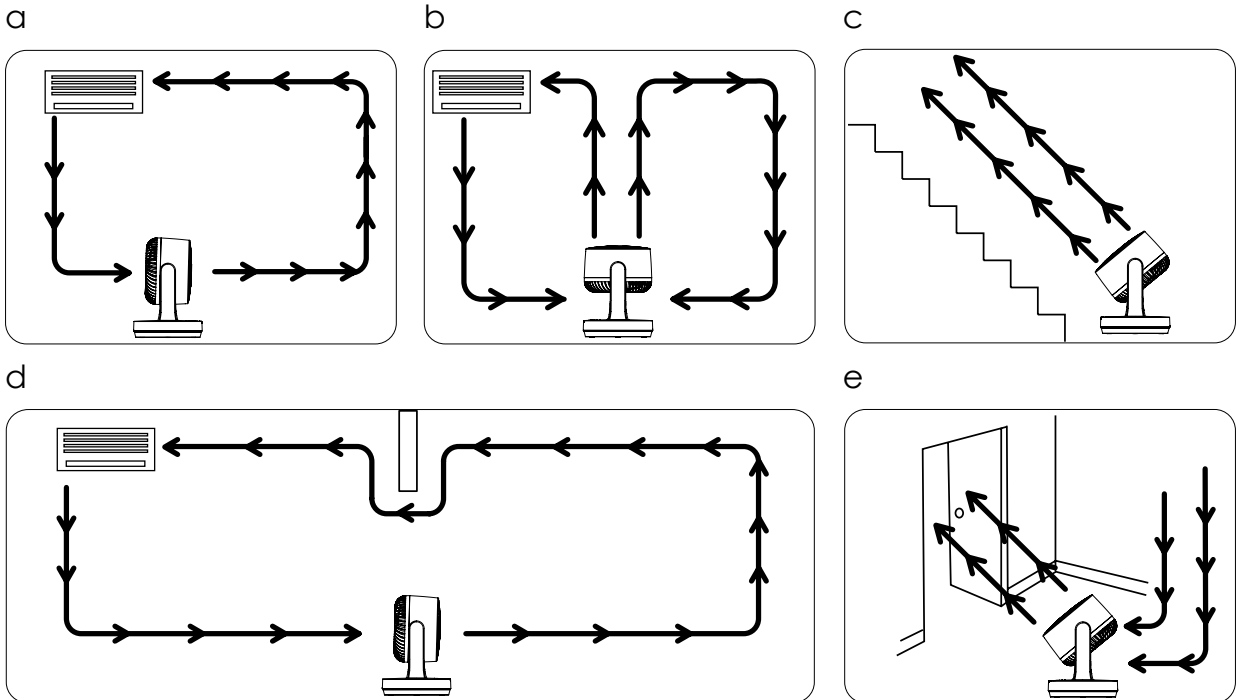

# Remote Operation

---

The fan can be operated either manually by the control panel on the fan unit itself or by the remote control supplied with the product.

- Be sure to direct the remote control toward the receiver on the control panel.
- Use the remote control within 5 metres from the receiver. If the remote control is not directed towards the receiver, the effectiveness will be reduced.
- Do not place any obstacle between the receiver and remote control.
- Please treat your remote control with care. Knocking or dropping it will reduce its reliability.
- Please store the remote control safely when not in use or in the special recess in the carry handle.

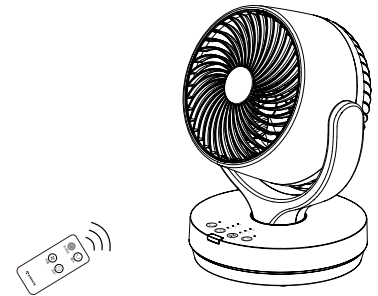 


Fig.7



**IMPORTANT: This remote control contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.**

## Replacing the Remote Control Battery (1pc x Lithium 3V CR2032)



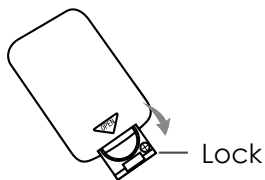 


Fig.8

 Turn over the remote control. Open the cover of battery compartment ~ squeeze lock towards centre to release

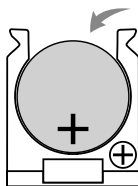

 Install the battery into the battery compartment. Take care of the polarity of the battery, which is indicated inside the battery compartment.

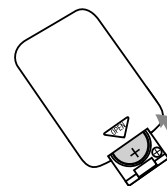

Close the battery cover. Ensure it clicks closed.

NB Please dispose of used batteries responsibly.



### **WARNING:**

#### **Keep Batteries Out of Reach of Children**

1. Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
2. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
3. Examine the devices and make sure the battery compartment is correctly secured – eg: that the screw or other mechanical fastener is tightened or locked. Do not use if the compartment is not secure.
4. Dispose of button batteries immediately and safely. Flat/dead batteries can still be dangerous.

# Cleaning & Care

---

- Unplug the appliance before cleaning.
- Do not use any chemical-based solutions for cleaning surfaces.
- Slightly moisten a cloth and then wipe off the surfaces of the fan.
- In order to remove the dust from the protective fan grille use a vacuum cleaner upholstery attachment.
- Ensure fan is completely dry before storage or reconnecting to the electrical supply.
- Never immerse the fan or fan motor in water or other liquid.
- If the fan is not used for long periods, protect with a suitable cover after cleaning, then store in a dry place.

# Recycling & Disposal


---

The packaging of your new fan has a recycle mark on it. Please dispose of it as recycled paper or by using the “Dual System”.



Please recycle



The symbol  on the product or on its packaging indicates that this product may not be treated as general household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office, your household waste disposal service or the store where you purchased the product.

## **UK Guarantee**

24 months warranty valid only in respect of defects found to be due to faulty workmanship or material. Proof of purchase is required to validate the guarantee. This guarantee is no longer valid if the damage has been caused by a fall, alteration or repair by any unauthorised persons or if the product has been resold. This guarantee in no way affects your statutory rights.

## **Compliance**

For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental directives). We reserve the right to make technical changes without prior notice.

# Safety

---

## Keep safe for future reference.

1. Check the household voltage to ensure it matches the fan's rated specification before using.
2. Always use this device in accordance with the instructions.
3. Close supervision is necessary when this fan is used near children and pets.
4. Do not allow children to play with the product or product packaging, such as plastic bags.
5. Repairs may only be carried out by a recognised repair centre, incorrect handling and faulty repairs may lead to danger and invalidate warranty.
6. This fan is not intended for use in wet or damp locations.
7. Never position the fan in an area where it may fall into a bath or other water container.
8. Do not use this fan if it has any damaged parts or it has fallen into water. Return the product to a recognised repair centre for examination and repair.
9. Do not insert any object into the grille whilst the fan is operating. It may cause damage to persons or property.
10. Always turn off the power supply before unplugging the product to move, store or clean it.
11. Always use both hands to carry this product. Do not lift by the carry handle alone – please support the fan base.
12. Do not operate the fan near an open flame, cooking or heating appliance or hot surface
13. Always place your fan on a firm, dry, level surface, away from curtains & blinds.
14. This fan is intended for indoor, domestic & light commercial use only and is not to be operated outside.
15. Do not hang anything from the fan grille.
16. Disconnect the unit from the electrical outlet before cleaning.
17. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
18. Arrange the power cord away from an area where it may be tripped over.
19. Never place the power cord under a carpet or rug.
20. Do not direct the fan towards babies or the elderly for extended periods.
21. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
22. Do not operate if the fan grille is removed or damaged.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## Technical Data

Model No:	DF15-R31-AC
EAN No:	5 060301 911455
Rated Power:	35W
Voltage:	220-240V ~ 50Hz
Ref:	IM/DF15R31AC/2102/GU86AA
Product Dims:	295 x 245 x 205 mm (H*W*D)
Carton Dims:	325 x 265 x 225 mm
N.W.	1.50kg
G.W.	2.00kg

