

Cleaning & Care

- ◆ Unplug the appliance before cleaning.
- ◆ Do not use any water or chemical-based solutions for cleaning metal surfaces.
- ◆ Slightly moisten a cloth and then wipe off the surfaces of the fan.
- ◆ In order to remove the dust from the protective fan grille use a vacuum cleaner upholstery attachment.
- ◆ Ensure fan is completely dry before storage or reconnecting to electrical supply.
- ◆ Never immerse the fan or fan motor in water or other liquid.
- ◆ If the fan is not used for long periods, protect with a suitable cover after cleaning, then store in a dry place.

This appliance complies with both the low voltage and electromagnetic compatibility directives. Its construction complies with current safety standards. We reserve the right to make technical changes without prior notice.

Recycling & Disposal

The packaging of your new fan has a recycle mark on it. Please dispose of it as recycled paper or by using the "Dual System".



Please Recycle




The symbol  on the product or on its packaging indicates that this product may not be treated as general household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office, your household waste disposal service or the store where you purchased the product.

UK guarantee

24 months warranty valid only in respect of defects found to be due to faulty workmanship or material. Proof of purchase is required to validate the guarantee. This guarantee is no longer valid if the damage has been caused by a fall, alteration or repair by any unauthorised persons or if the product has been resold. This guarantee in no way affects your statutory rights.

Technical Data

Model No: MTF-18(BK/RE/S/T)
Rated Power: 35W
Voltage: 220-240V ~ 50Hz
Ref: IM/MTF18/1904/GU86AA
Product Dims: 140 x 140 x 375 mm (L*D*H)
N.W. 1.93kg
G.W. 2.35kg

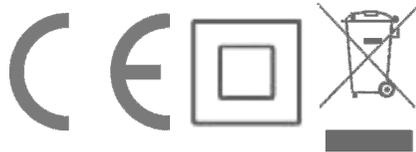

© 2019 Newton Stovold Assocs Ltd GU8 6AA
www.nsauk.com

NSA^{UK}
newton stovold associates

Mini Tower Fan Model MTF-18



Eligible for Quiet Mark accreditation as
"...one of the quietest **Mini Tower** fans
we have tested"

Instruction manual

(Apr 2019)

- ❖ 3 speeds
- ❖ 4hr timer
- ❖ Sleep mode
- ❖ Ioniser
- ❖ Oscillation
- ❖ Carry Handle
- ❖ Footprint 14 x 14cm

Please keep safe for future reference

Safety Instructions

Thank you for purchasing this Mini Tower Fan. Please read this instruction manual before using your Mini Tower Fan for the first time. Keep safe for future reference.


CAUTION:

Use the fan only as described in this manual. Misuse may cause a fire or an electric shock

- Do not operate the fan with a damaged power cord or plug, after it malfunctions, has been dropped or damaged in any way. If the power cord is damaged it must be replaced by a qualified service engineer to avoid a hazard.
- Close supervision is necessary when this fan is used near children and pets.
- Always turn off the fan after use, before cleaning or moving location.
- Do not insert fingers or other objects into the fan guard.
- Do not operate the fan in areas where petrol, paint or other flammable liquids are used or stored.
- Do not place the fan near an open flame, cooking or heating appliance or hot surface.
- This fan is not intended for use in wet or damp locations. Never position the fan in an area where it may fall into a bath or other water container.
- This fan should not be operated outside.
- Always use on a dry, level surface.
- Do not let the power cord hang over the edge of a table or counter.
- Arrange the power cord away from an area where it may be tripped over.
- Never place the power cord under a carpet or rug.
- To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
- Do not hang or mount the fan on a wall or ceiling.
- This product is designed for household and light commercial use ONLY.
- This appliance can be used by children aged from 8 yrs and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Parts Description

- Front Panel
- Control Panel w. LED lights
- Ioniser
- Oscillation
- Base (small footprint ~ 14 x 14cm)
- 4hr timer
- Sleep Mode
- Fan guard
- Carry handle

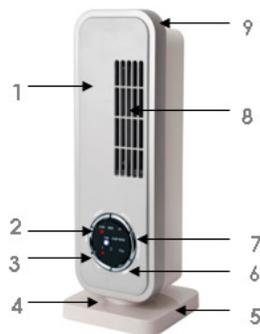

Control Panel

On/Off ~ Press to turn the unit on and off.


Speed ~ Press to select Low, Medium and High fan speeds, press the button until the red LED light indicates the desired speed.

Sleep Mode ~ This mode will use the set fan speed and step down through the speeds for 30 minutes ~ for example, select sleep mode plus High speed, the fan will alternate through Hi, Med, & Low for 30 mins. Then fan speed will drop to Med, and alternate between Med & Low for 30 mins, then fan speed it will drop to Low and alternate between Low and stop for 30mins. After this, unless the timer is set, the cycle will start again in the selected High speed. When Med fan speed is selected, sleep mode will alternate between med, low & stop. If low fan speed is selected sleep mode will alternate continuously between low and stop until the unit is manually powered off or the set time is reached.

Timer ~ You can set the run time for 1, 2 or 4 hours. Press the Timer button to move through the timer options. If there is no red LED light showing the timer is off and operation is continuous until the fan is manually powered off.

Oscillation (OSC) ~ Press once to activate the oscillation feature, for wide distribution of air. Press OSC button again to stop oscillation function.

Ion ~ Press to switch on the Ioniser to release negatively charged Ions to aid air-cleaning, press again to switch off this function. A blue LED light glows when the ION function is activated.

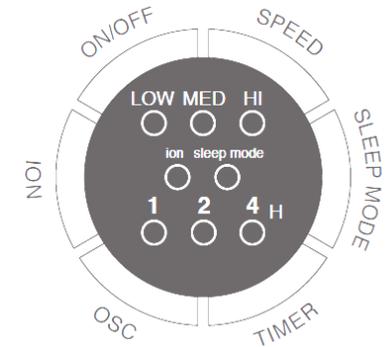


BS plug wiring

Wiring instructions: Should it be necessary to change the plug please note the wires in the mains lead are coloured in accordance with the following code:

BLUE – NEUTRAL * BROWN – LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK.
- The BROWN wire is the LIVE and must be connected to the terminal which is marked with the letter L or coloured RED.
- Neither wire is to be connected to the terminal which is marked with the letter E or symbol \oplus or coloured GREEN OR GREEN /YELLOW.
- Always ensure that the cord grip is positioned and fastened correctly.

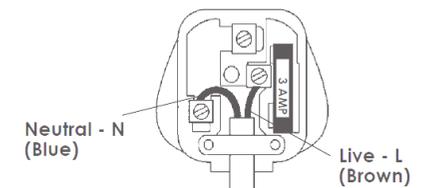

If a 13A (BS 1363) fused plug is used it must be fitted with a 3A fuse. If in doubt consult a qualified electrician.

WARNING: If the power cord is damaged it must be replaced by a qualified electrician to avoid a hazard.